




Recommended Tools

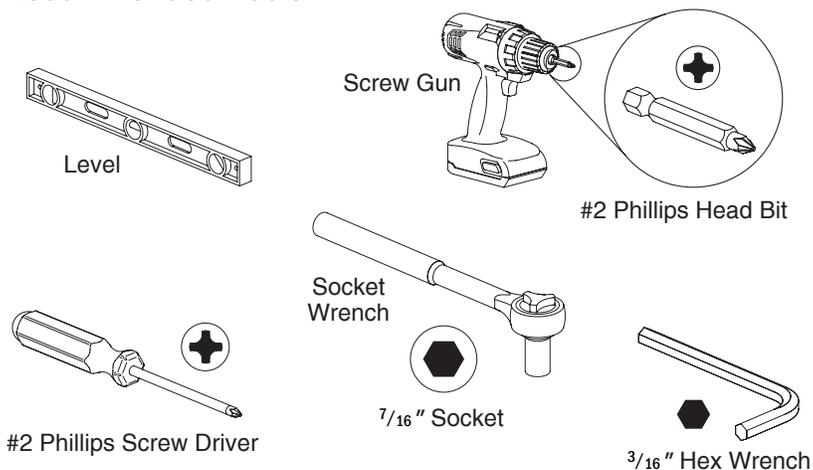


Wall Dependent Panel Table

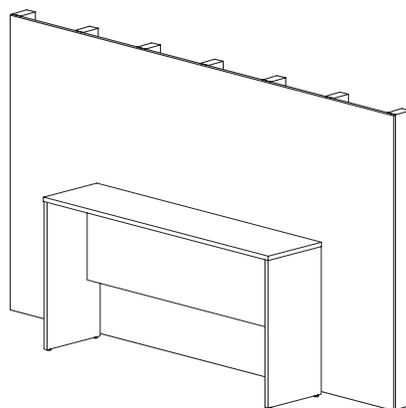

Package Contents

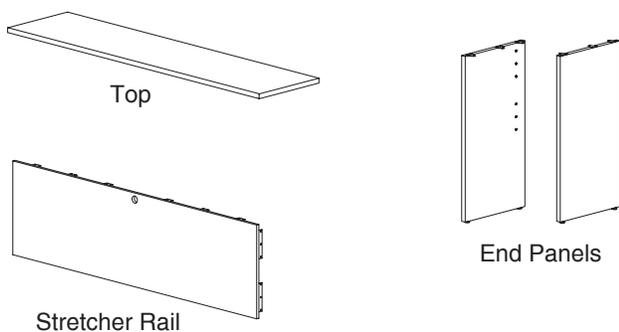

Hardware Used

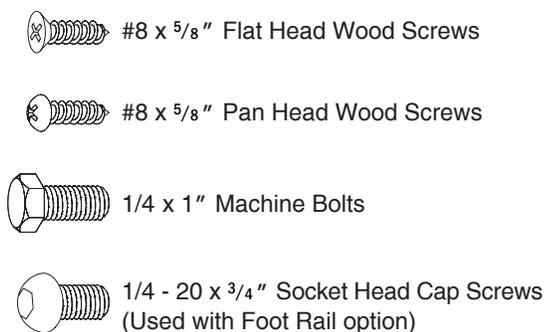


Step 1

Attach Stretcher Rail to End Panels

- Stand End Panels upright and attach Stretcher Rail using 1/4" bolts. Tighten bolts firmly.

**Note:** Two people are recommended for assembly.

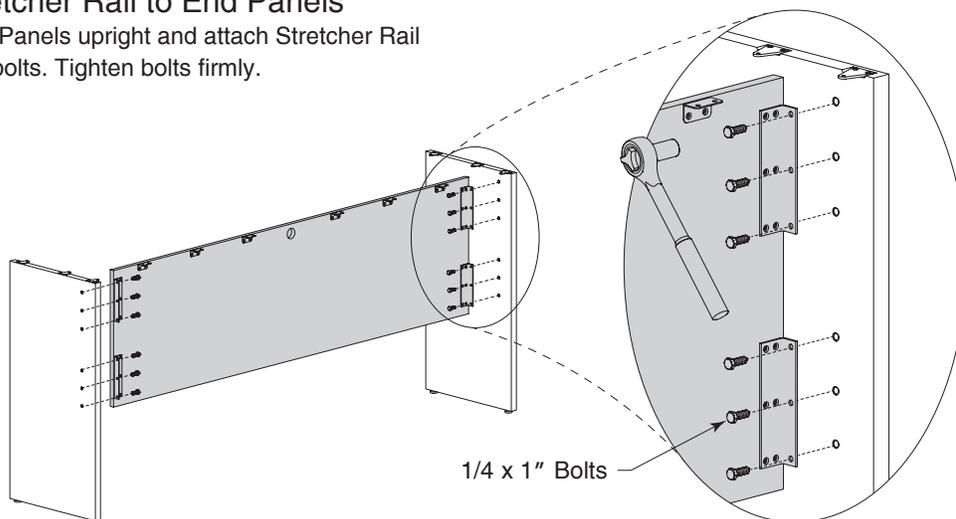


**Notice To Installers:** Failure to comply with installation instructions will compromise the safety, durability and performance of this product, which may risk injury to the user of this product and/or diminish the product life cycle. Jasper Group assumes no liability in these instances.

**Step 2**

**Attach Worksurface to Frame**

- Place worksurface onto frame. Align edges accordingly.
- Fasten top to frame using all under surface brackets. Use #8 x 5/8" flat head screws on triangle brackets and #8 x 5/8" pan head screws on L-brackets.


**Wall Dependent Panel Table (continued)**

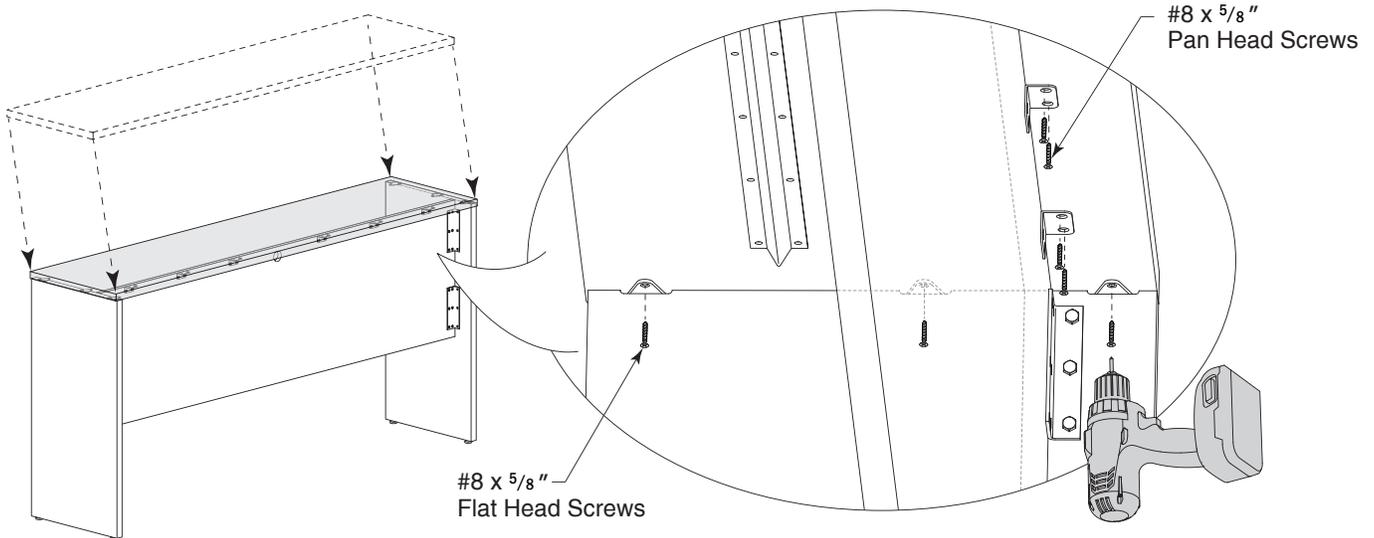

**Step 3**


**Level Table**

- Position table against wall in desired location. Level front-to-back and side-to-side by rotating adjustable glides.

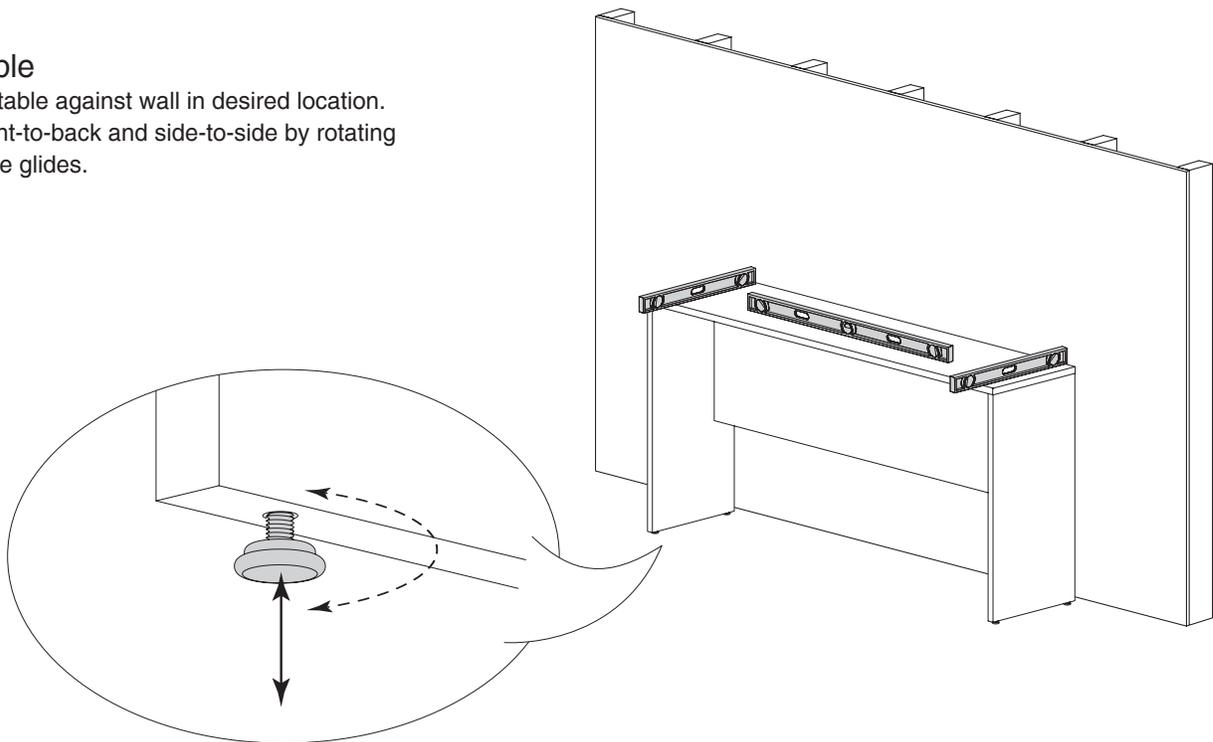


**Notice To Installers:** Failure to comply with installation instructions will compromise the safety, durability and performance of this product, which may risk injury to the user of this product and/or diminish the product life cycle. Jasper Group assumes no liability in these instances.

Table Options

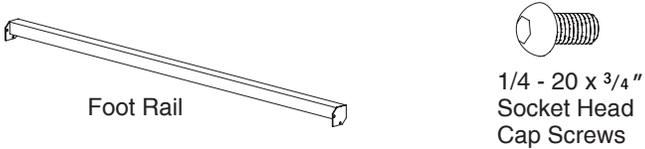


Wall Dependent Panel Table (Options)

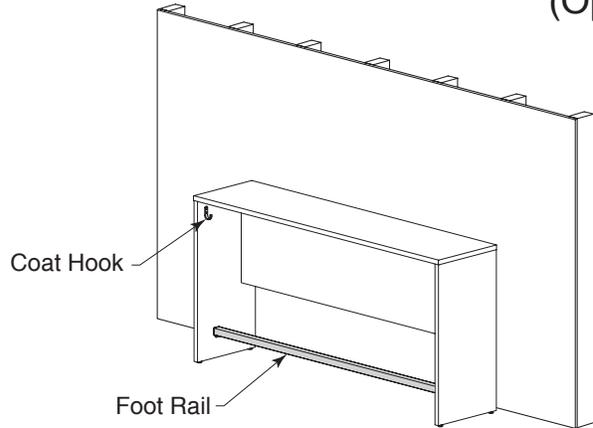

Coat Hook

Attach Coat Hooks to End Panels


- Pilot holes have been factory pre-drilled for the two coat hook locations. Use these holes and #8 x 5/8" flat head screws to attach hooks to end panels.

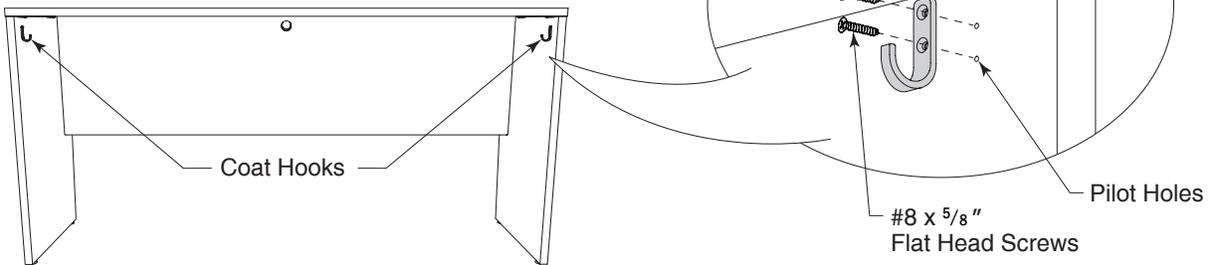

Foot Rail

Attach Foot Rail to End Panels

- Locate holes with threaded inserts towards bottom of end panels.
- Carefully slide Foot Rail into place between end panels.  
*Note:* Bottom of End Panels may need to be pulled out slightly as not to scratch/mar inside surfaces.
- Fasten using 1/4 - 20 x 3/4" Socket Head Cap Screws.

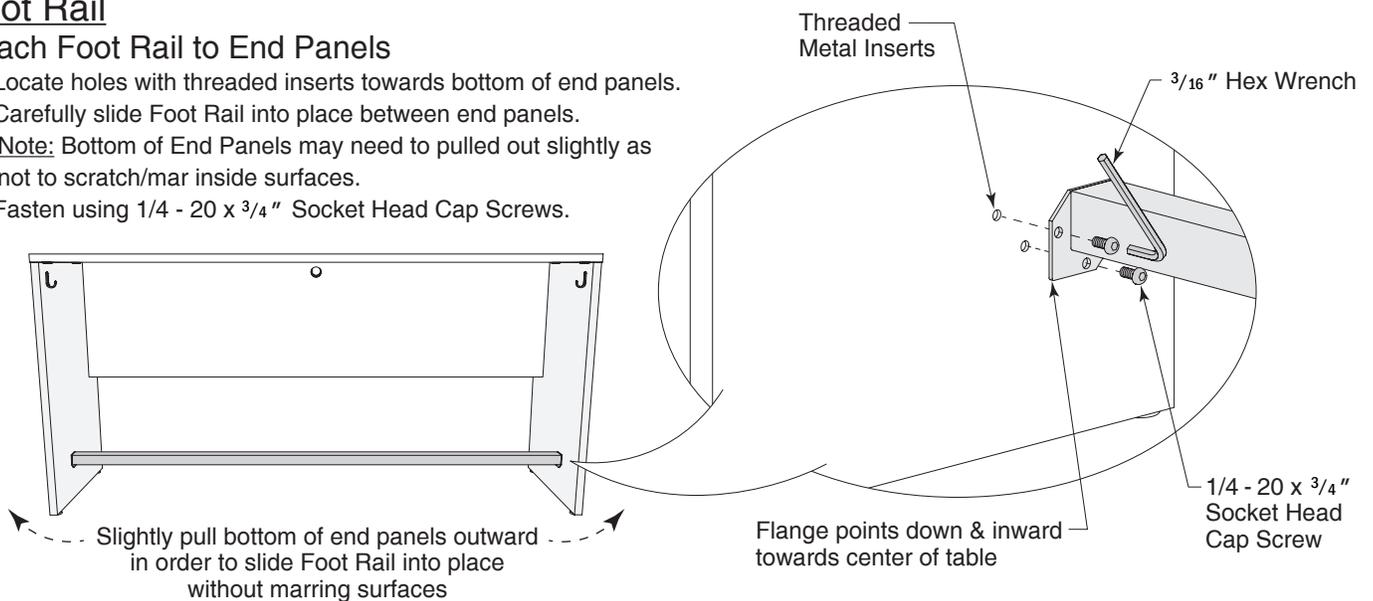

**Notice To Installers:** Failure to comply with installation instructions will compromise the safety, durability and performance of this product, which may risk injury to the user of this product and/or diminish the product life cycle. Jasper Group assumes no liability in these instances.