


Mounting of Optional Hanging Modesty Panel (*Stationary Height*) Freestanding Tables/Desk • Peninsula Desk • Runoff Desk

Recommended Tools




Tape Measure



Power Drill
drill bits & screw bits

Pencil


Hardware Used Provided




#8 x 7/8" Flat Head Wood Screws

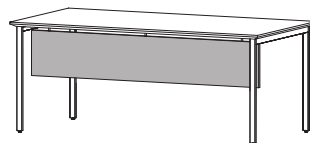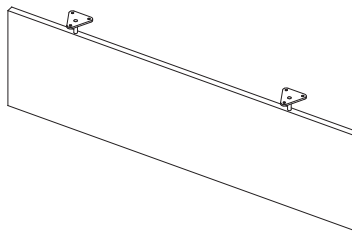

FreeStanding Table Desk

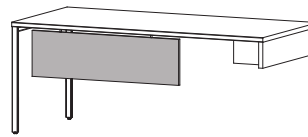


Peninsula Desk

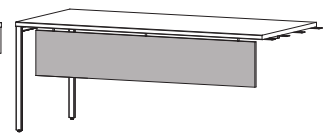


Runoff Desk

Dimensioning Information

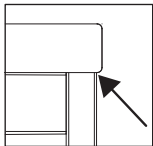


Flat Edge

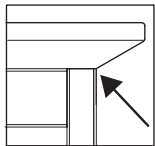

Bevel Edge


all dimension reference of the
bottom edge of the top for both
edge shapes.

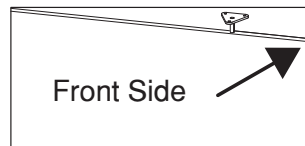


Front Side

all dimension reference off front
edge/side of the modesty panel

Freestanding Tables/Desk

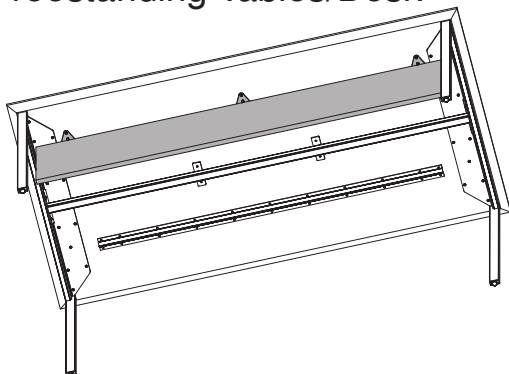


1. Mark the underside of top from the front edge with dimension **A** = 5³/₄".
2. Center the modesty panel between the legs of the table desk and mark for screw locations.
3. Fasten with the screws included with the modesty panel.

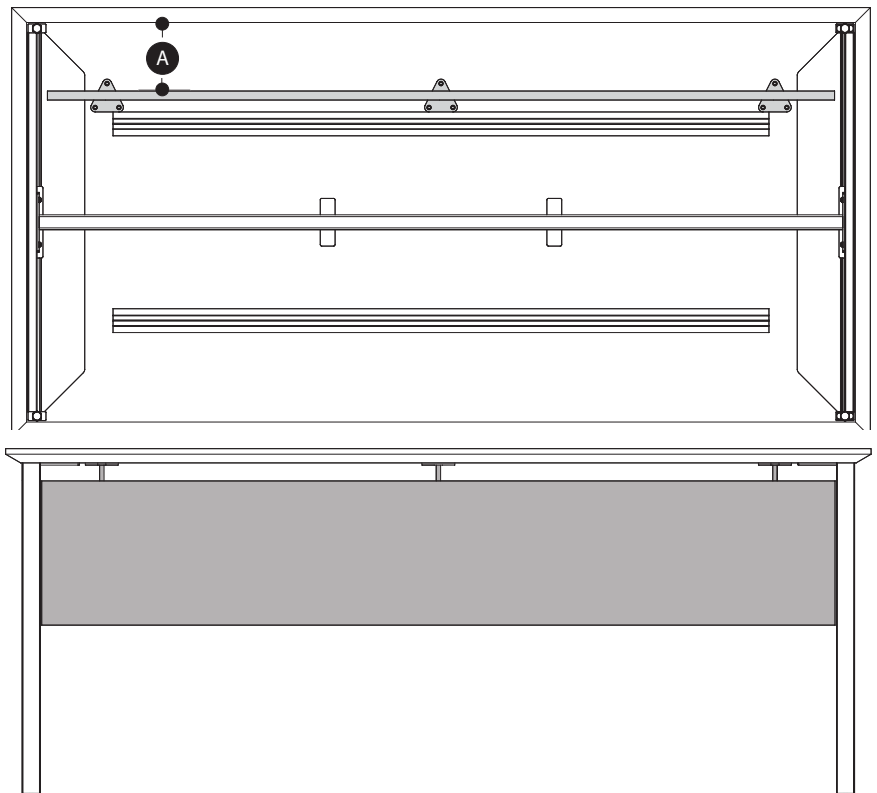



Notice To Installers: Failure to comply with installation instructions will compromise the safety, durability and performance of this product, which may risk injury to the user of this product and/or diminish the product life cycle. Jasper Group assumes no liability in these instances.



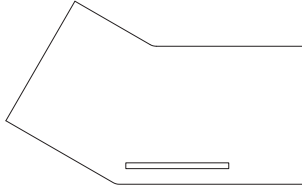
Mounting of Optional Hanging Modesty Panel (*Stationary Height*) *Continued*

Peninsula Desk

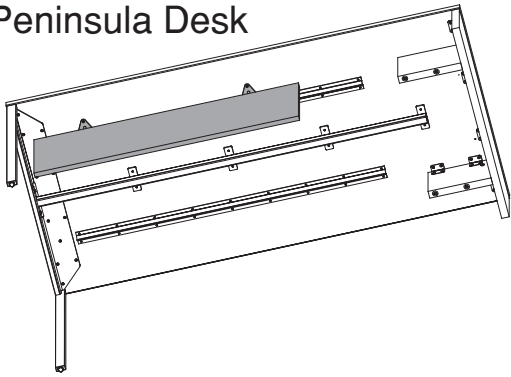

1. Determine the mounting demensions from the table below.
2. Measure the end panel to the center of the triangle bracket.
3. Hold the modesty bracket into place so the attachment holes can be marked on the underside.
4. Double check assure that the hole markings holes are square and pararell with the front edge of the desk top.
5. Fasten with screws included with the modesty panel.

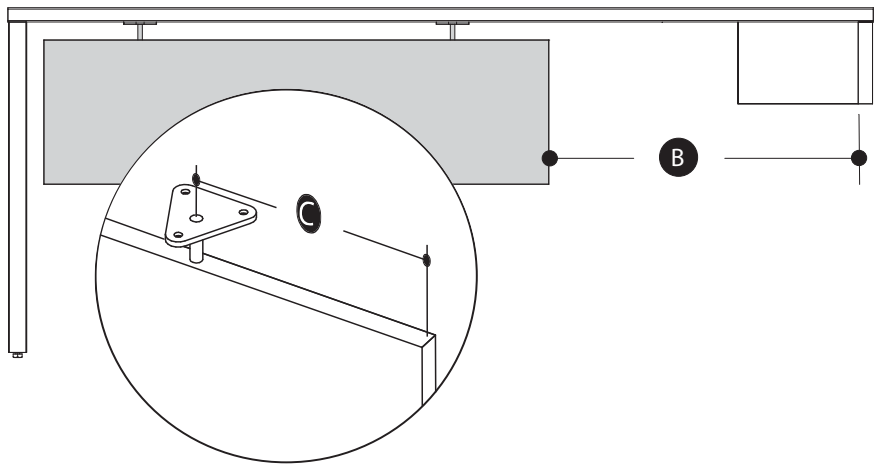
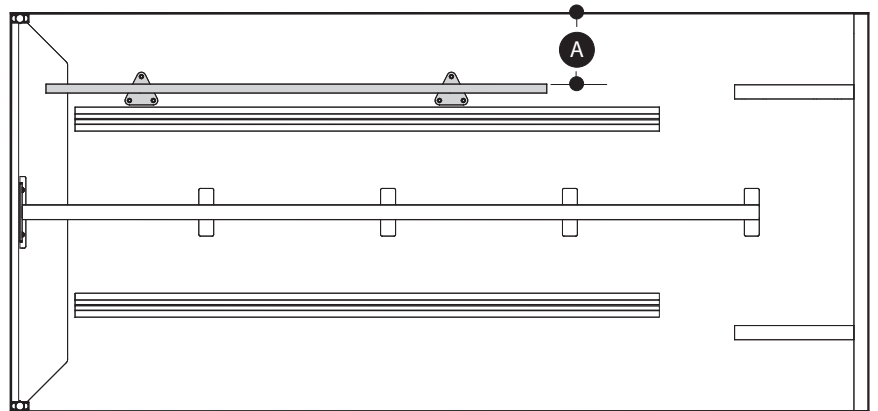


Modesty Panel Locator Chart for Peninsula Desks						
overall top width	rectangular peninsula desk(s) all top depth both support legs or post		arc end peninsula desk(s) all top depth support post only		boomerang peninsula desk(s) all top depth leg support only	
	A	B	A	B	A	B
48"w	5 ³ / ₄ "	27"	5 ³ / ₄ "	27"	5 ³ / ₄ "	27"
54"w	5 ³ / ₄ "	27"	5 ³ / ₄ "	27"	5 ³ / ₄ "	27"
60"w	5 ³ / ₄ "	27"	5 ³ / ₄ "	27"	5 ³ / ₄ "	27"
66"w	5 ³ / ₄ "	27"	5 ³ / ₄ "	27"	5 ³ / ₄ "	27"
72"w	5 ³ / ₄ "	27"	5 ³ / ₄ "	27"	5 ³ / ₄ "	27"



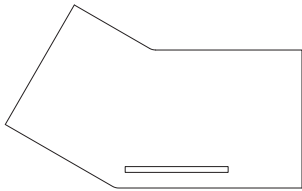
Notice To Installers: Failure to comply with installation instructions will compromise the safety, durability and performance of this product, which may risk injury to the user of this product and/or diminish the product life cycle. Jasper Group assumes no liability in these instances.

Mounting of Optional Hanging Modesty Panel (*Stationary Height*) *Continued*

Runoff Desk

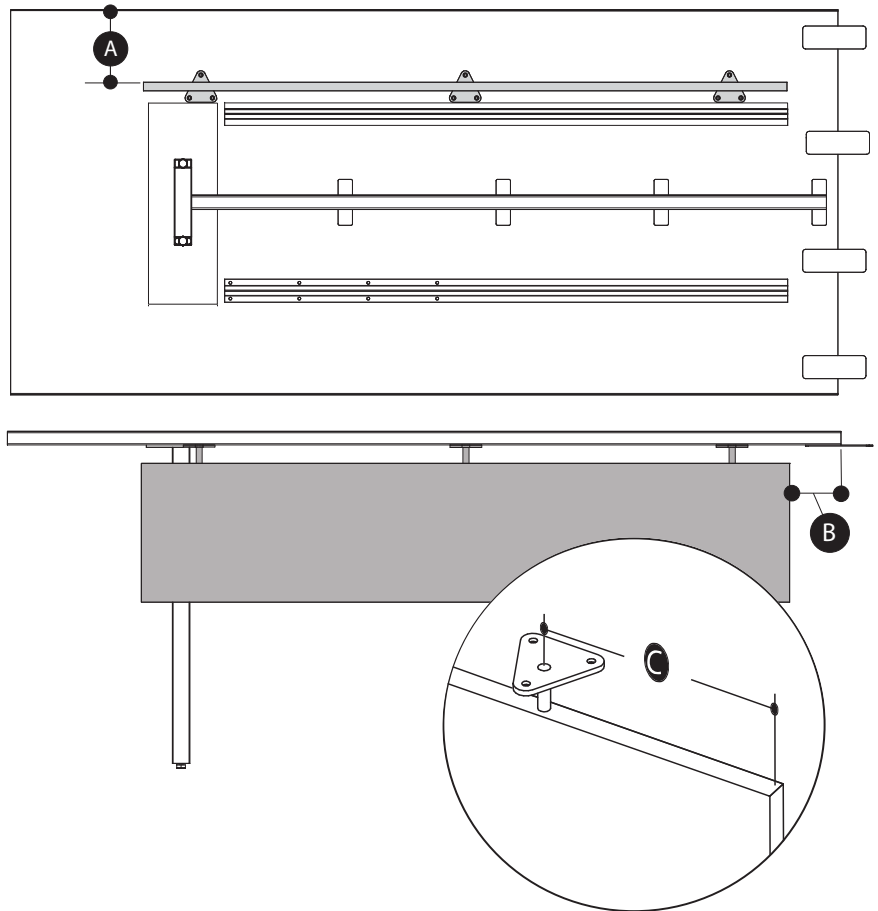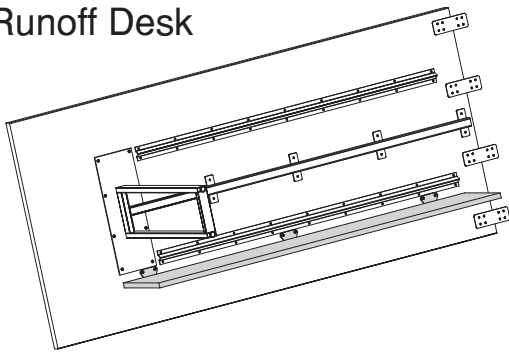

1. Determine the mounting demensions from the table below.
2. Measure the end panel to the center of the triangle bracket.
3. Hold the modesty bracket into place so the attachment holes can be marked on the underside.
4. Double check assure that the hole markings holes are square and pararell with the front edge of the desk top.
5. Attach with screws inculded with the modesty panel.

Modesty Panel Locator Chart for Peninsula Desks						
overall top width	rectangular peninsula desk(s) all top depth both support legs or post		arc end peninsula desk(s) all top depth support post only		boomerang peninsula desk(s) all top depth leg support only	
	A	B	A	B	A	B
66"w	5 ³ / ₄ "	5"	5 ³ / ₄ "	5"	5 ³ / ₄ "	5"
72"w	5 ³ / ₄ "	5"	5 ³ / ₄ "	5"	5 ³ / ₄ "	5"
78"w	5 ³ / ₄ "	5"	5 ³ / ₄ "	5"	5 ³ / ₄ "	5"
84"w	5 ³ / ₄ "	5"	5 ³ / ₄ "	5"	5 ³ / ₄ "	5"

Notice To Installers: Failure to comply with installation instructions will compromise the safety, durability and performance of this product, which may risk injury to the user of this product and/or diminish the product life cycle. Jasper Group assumes no liability in these instances.