


LOK TRAINING TABLES

Assembly Instruction for Fixed Cantilever Base on Half Round Top

Recommended tools

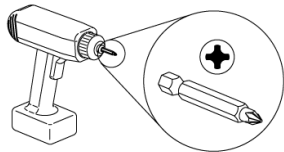

#3 Phillips Head



1/8" Drill Bit



Measuring Tape

Hardware enclosed



#12 x 1" Phillips
Panhead Wood
Screws
Qty= 16



Set of (2) Bases

NOTE: all screws provided must be installed for proper installation and compliance with product warranty.

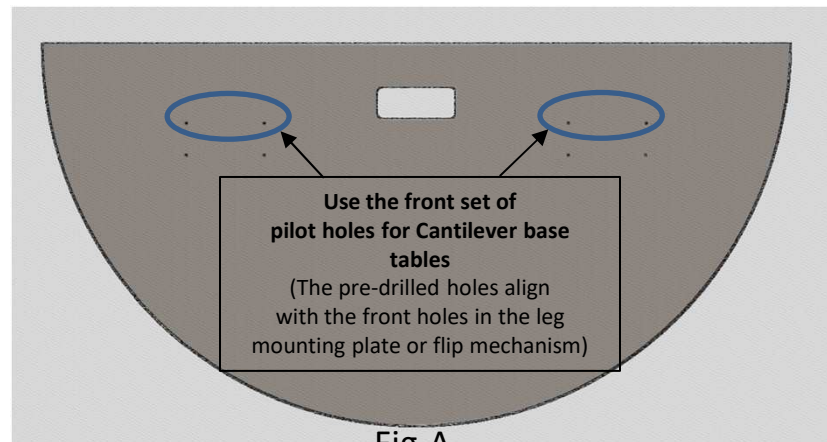
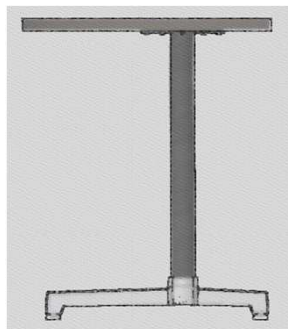


Fig-A

1. Place work surface bottom side up on a non-marring surface
2. Place the table legs on the work surface and align the front holes of the mounting plate with the appropriate pilot holes in the work surface(see Fig-A).
3. Mark the remaining hole locations for each base. Drill pilot holes 1/8"Ø x 1/2" deep in screw locations marked.
4. Align the leg mounting plate with the holes and secure in place with #12x1" panhead screws. Install (8) screws per leg. (see Fig-B)

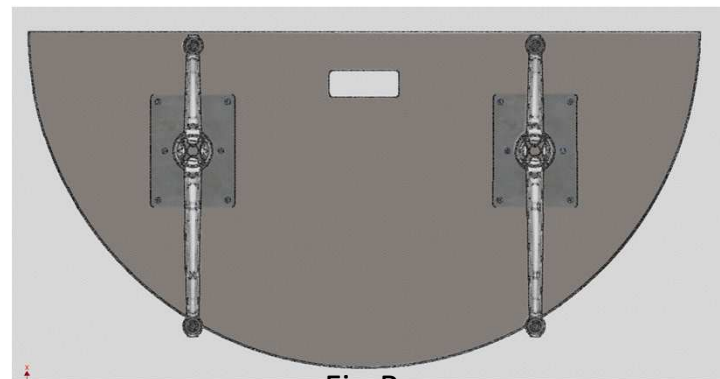


Fig-B