


LOK TRAINING TABLES

Assembly Instruction for Privacy Screen




Recommended tools

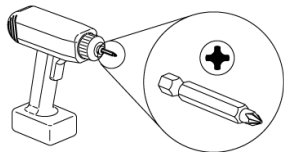

#2 Phillips Head



1/8" Drill Bit

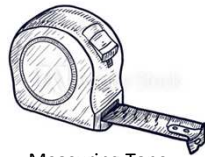


Measuring Tape

1. Align the bolt holes in the metal decorative cap with the pre-drilled holes on the front side of privacy screen. Then align the larger 9/32" holes of the metal angle bracket with holes on the back side of the panel. Use (2) 1/4-20 x 1/2" machine screws to attach. (Fig.1A) Repeat for the remaining brackets. Screens 60" and longer require (3) brackets. Screens 48" or less require (2) brackets (Fig.1B)

Hardware enclosed



#8 x 5/8"
Panhead Screws
Qty= 6 for ≥60"
Qty = 4 for ≤48"



Metal Angle
Brackets
Qty= 3 for ≥60"
Qty=2 for ≤48"



1/4-20 x 1/2"
Phillips Head
machine screw
Qty= 6 for ≥60"
Qty=4 for ≤48"



Decorative
Metal Cap
Qty= 3 for ≥60"
Qty=2 for ≤48"

NOTE: all screws provided must be installed for proper installation and compliance with product warranty.

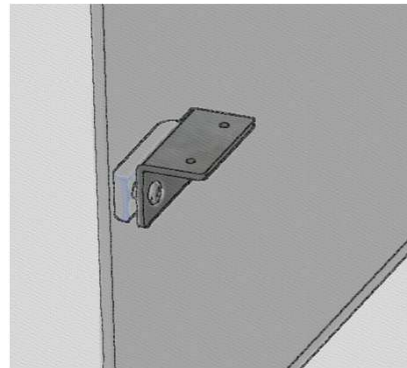


Fig. 1A

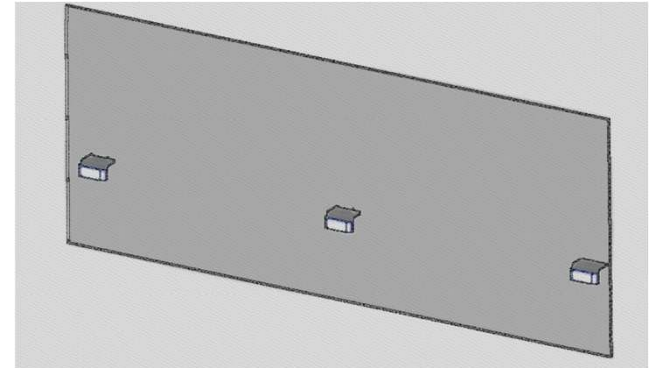


Fig. 1B

LOK TRAINING TABLES

Assembly Instruction for Privacy Screen (Cont.)

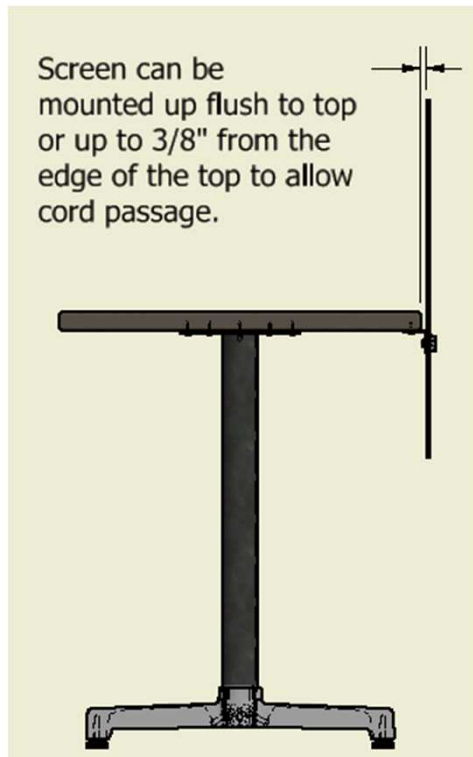


Diagram A

2. Position the privacy screen on the underside of the work surface. The privacy screen should be centered side to side (see diagram B). The screen can be mounted flush to the edge of the table top or up to 3/8" from the top edge to allow space for cord passage (see diagram A)
3. Mark the screw hole locations on the underside of the worksurface. Drill a 1/8" dia. x 1/2" deep pilot hole in the positions marked.
4. Align the brackets with the pilot holes and secure each bracket in place with (2) # 8x5/8" panhead screws provided.

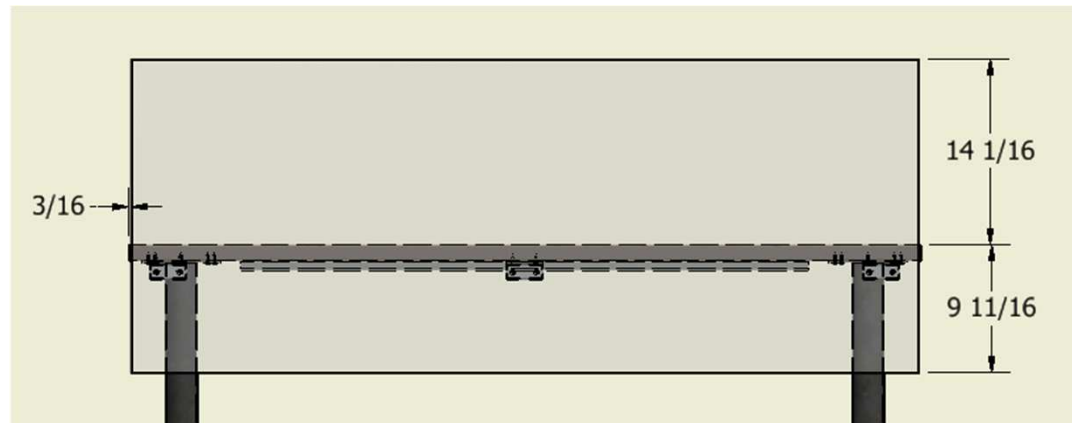


Diagram B