




Recommended Tools

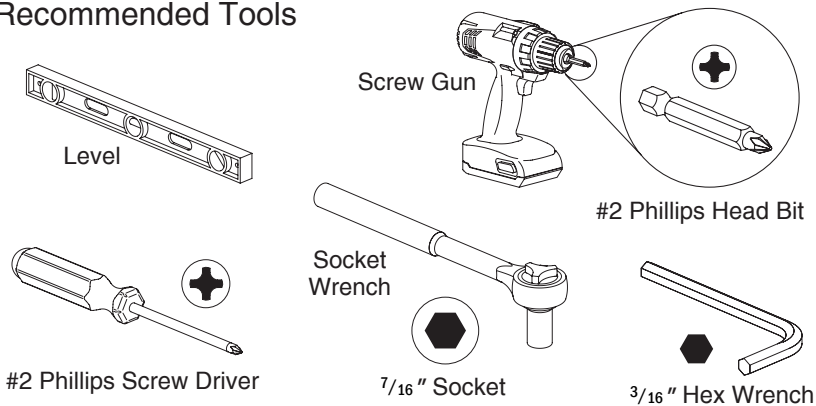


Panel Table

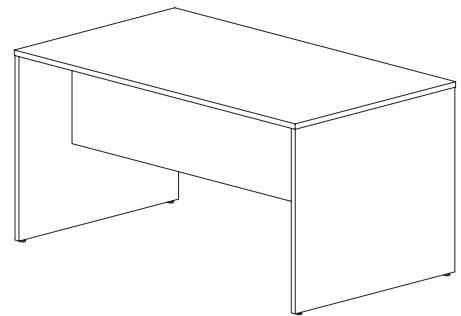

Package Contents

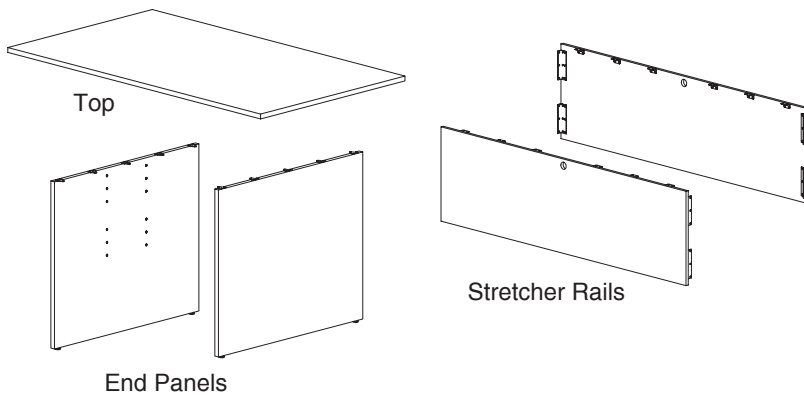

Hardware Used

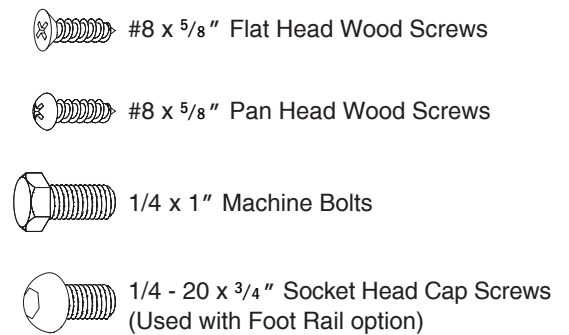


Step 1

Attach Stretcher Rails to End Panels

- Stand End Panels upright and attach Stretcher Rail using 1/4" bolts. Do not tighten bolts firmly until both Stretcher Rails are in place.
- After both Stretcher Rails are placed, tighten bolts firmly.

Note: Two people are recommended for assembly.

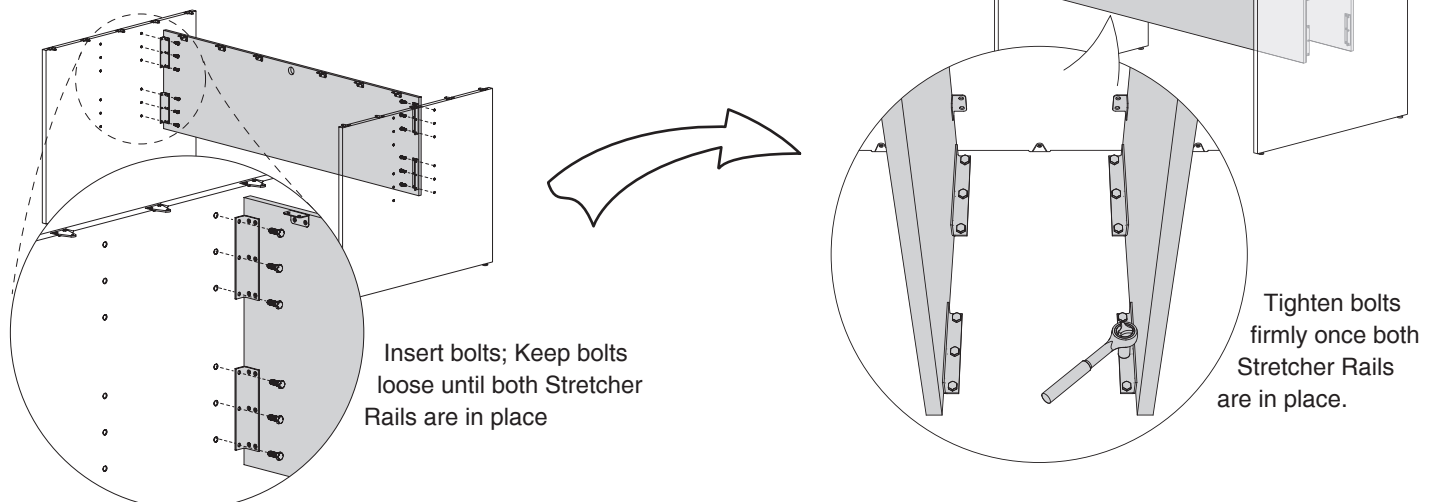

Notice To Installers: Failure to comply with installation instructions will compromise the safety, durability and performance of this product, which may risk injury to the user of this product and/or diminish the product life cycle. Jasper Group assumes no liability in these instances.


Step 2

Attach Worksurface to Frame

- Place worksurface onto frame. Align edges accordingly.
- Fasten top to frame using all under surface brackets. Use #8 x $\frac{5}{8}$ " flat head screws on triangle brackets and #8 x $\frac{5}{8}$ " pan head screws on L-brackets.

Panel Table (continued)


#8 x $\frac{5}{8}$ " Pan Head Screws

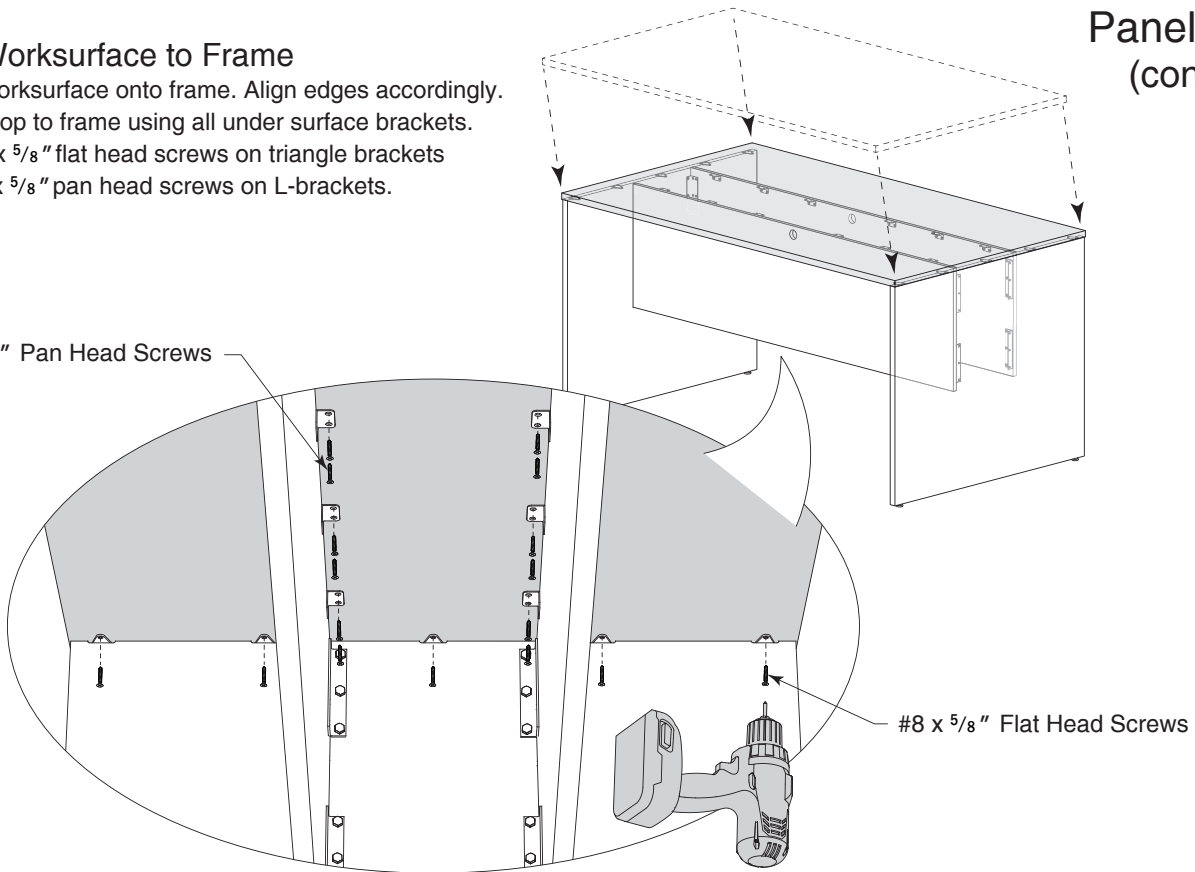

Step 3


Level Table

- Level table front-to-back and side-to-side by rotating adjustable glides.

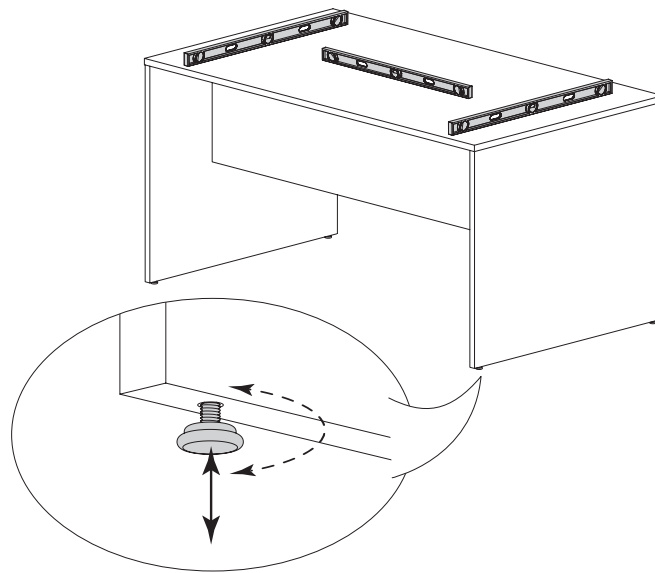


Notice To Installers: Failure to comply with installation instructions will compromise the safety, durability and performance of this product, which may risk injury to the user of this product and/or diminish the product life cycle. Jasper Group assumes no liability in these instances.

Table Options

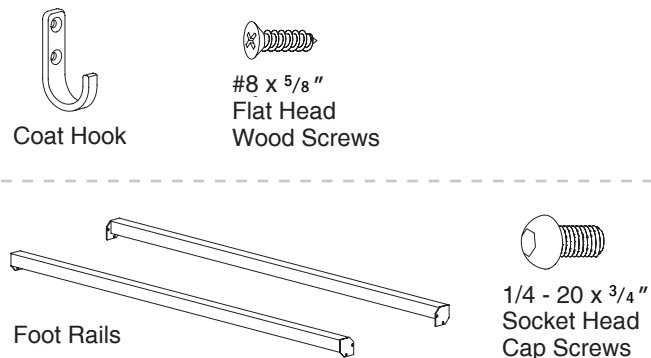


Panel Table (Options)

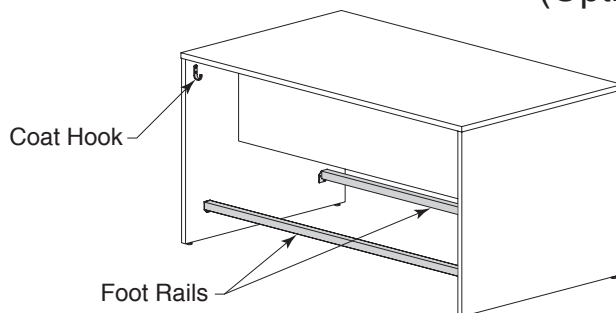

Coat Hook

Attach Coat Hooks to End Panels


- Pilot holes have been factory pre-drilled for the four coat hook locations. Use these holes and #8 x 5/8" flat head screws to attach hooks to end panels.

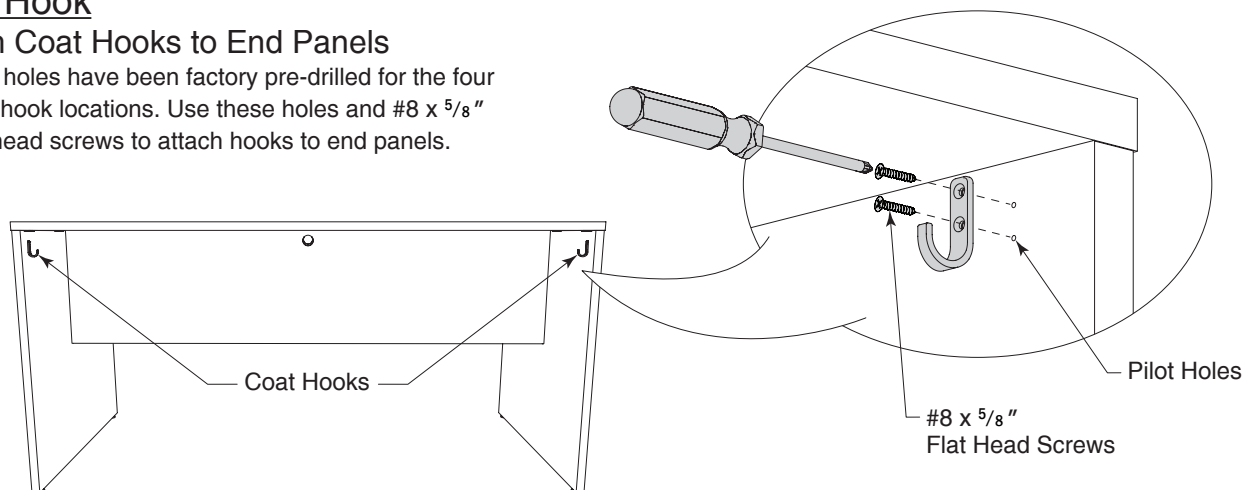

Foot Rail

Attach Foot Rails to End Panels

- Locate holes with threaded inserts towards bottom of end panels.
- Carefully slide Foot Rails into place between end panels.
Note: Bottom of End Panels may need to be pulled out slightly as not to scratch/mar inside surfaces.
- Fasten using 1/4 - 20 x 3/4" Socket Head Cap Screws.

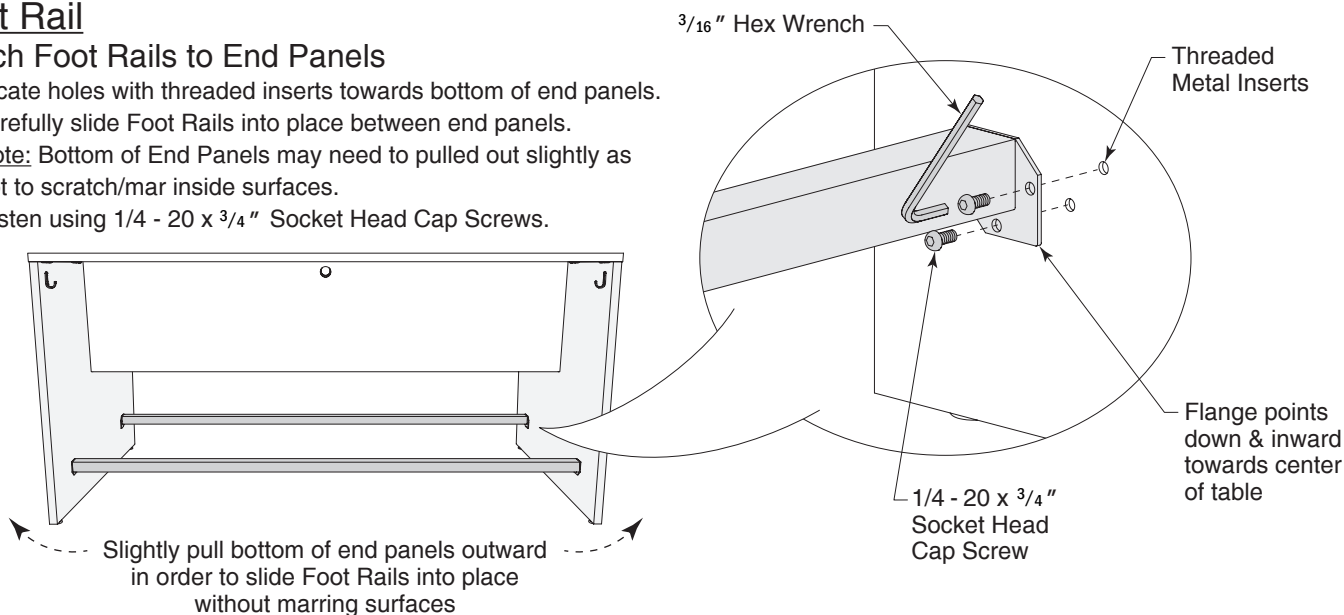

Notice To Installers: Failure to comply with installation instructions will compromise the safety, durability and performance of this product, which may risk injury to the user of this product and/or diminish the product life cycle. Jasper Group assumes no liability in these instances.