




Recommended Tools

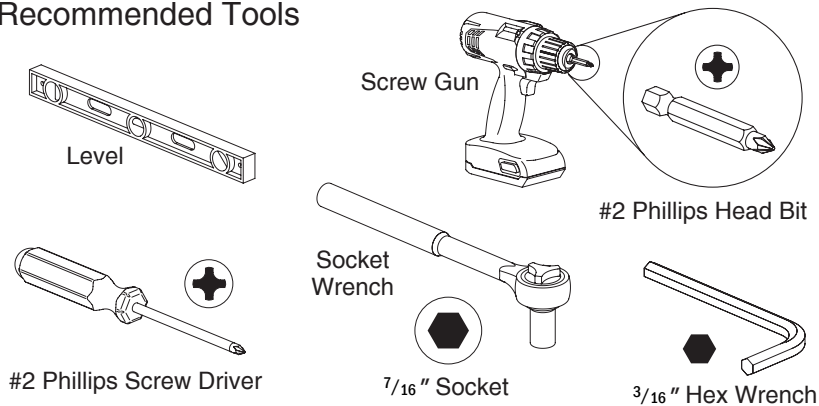


Layered Table

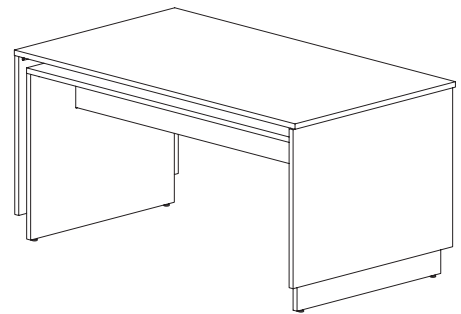

Package Contents

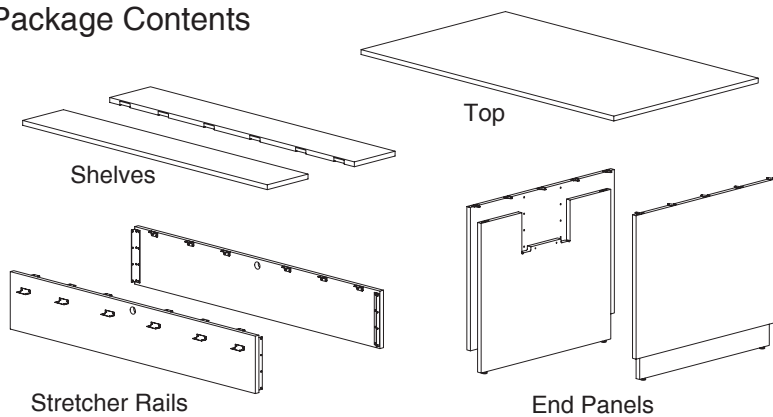

Hardware Used


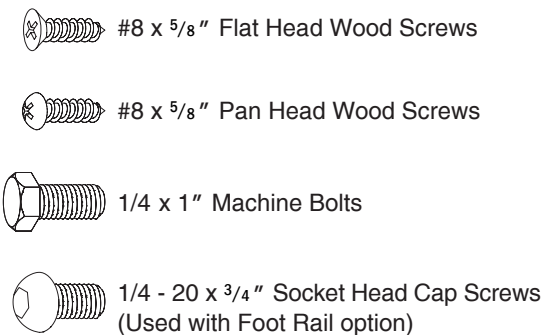


Step 1

Attach Stretcher Rails to End Panels

- Stand End Panels upright and attach Stretcher Rail using 1/4" bolts. Do not tighten bolts firmly until both Stretcher Rails are in place.
- After both Stretcher Rails are placed, tighten bolts firmly.

Note: Two people are recommended for assembly.

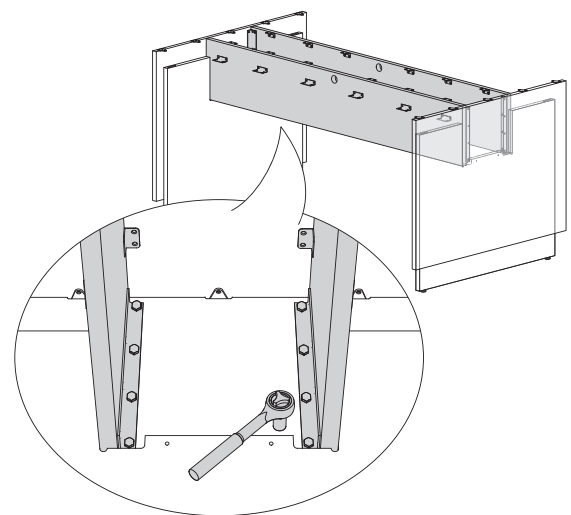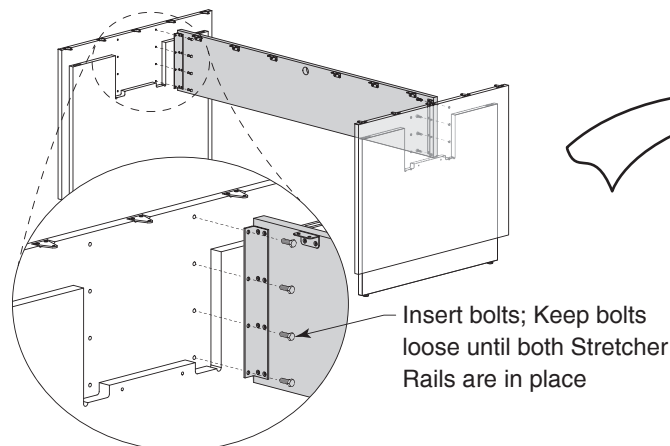


Tighten bolts firmly once both Stretcher Rails are in place.


Notice To Installers: Failure to comply with installation instructions will compromise the safety, durability and performance of this product, which may risk injury to the user of this product and/or diminish the product life cycle. Jasper Group assumes no liability in these instances.

Step 2**Attach Worksurface to Frame**


- Place worksurface onto frame. Align edges accordingly.
 - Fasten top to frame using all under surface brackets.
- Use #8 x 5/8" flat head screws on triangle brackets and #8 x 5/8" pan head screws on L-brackets.

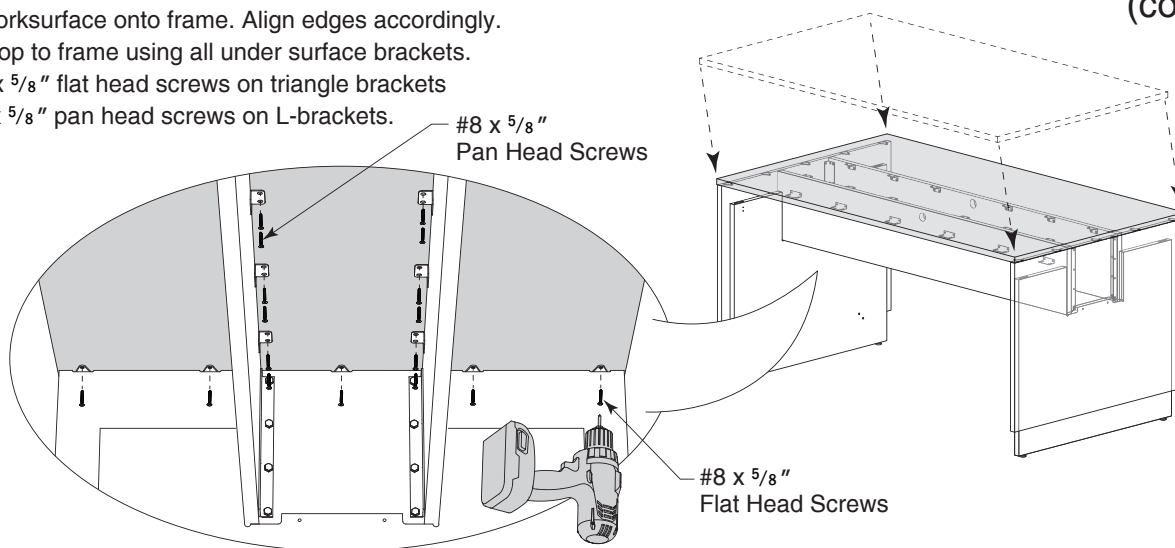**Layered Table
(continued)****Step 3****Attach Shelves**

- With shoulder bolts facing down and bracket cutouts towards the back, slide shelves into place under main worksurface.
- Align shoulder bolts in bottom of shelf into slotted cutouts. Push shelf forward to engage shoulder bolts into Mod-eez brackets.
- Fasten shelves to L-brackets using #8 x 5/8" pan head screws.

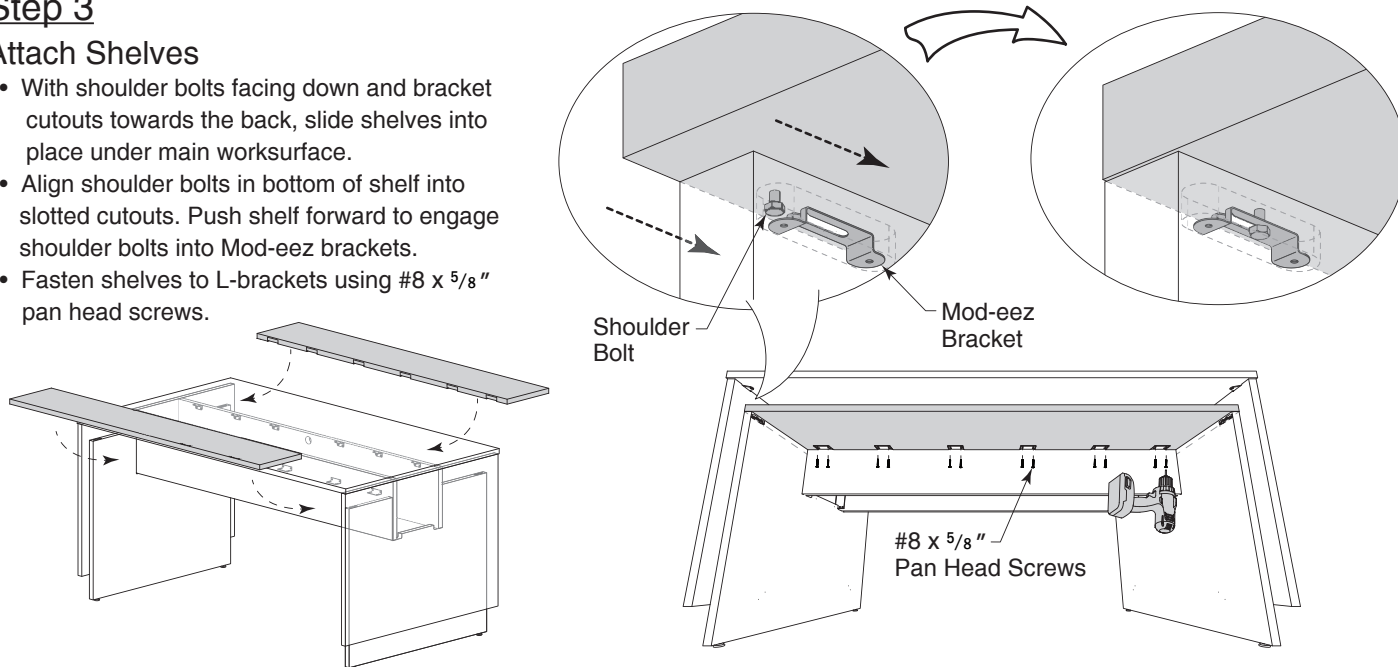
**Step 4****Level Table**

- Level table front-to-back and side-to-side by rotating adjustable glides.

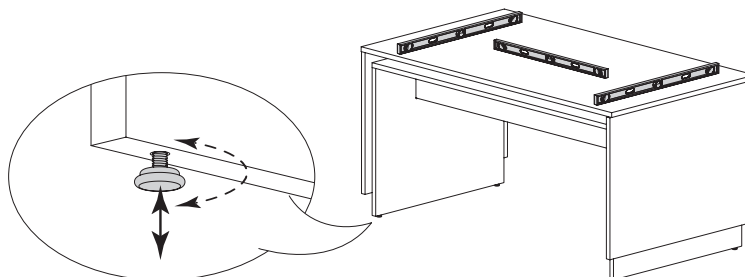


Notice To Installers: Failure to comply with installation instructions will compromise the safety, durability and performance of this product, which may risk injury to the user of this product and/or diminish the product life cycle. Jasper Group assumes no liability in these instances.

Table Options

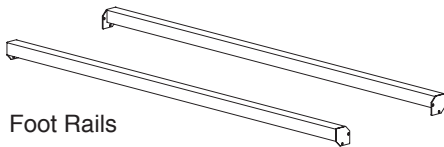


Layered Table (Options)

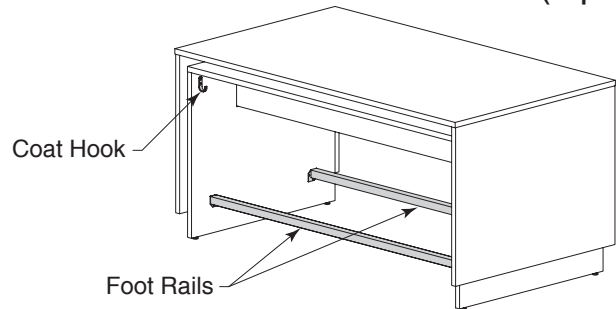

Coat Hook

Attach Coat Hooks to End Panels


- Pilot holes have been factory pre-drilled for the four coat hook locations. Use these holes and #8 x 5/8" flat head screws to attach hooks to end panels.

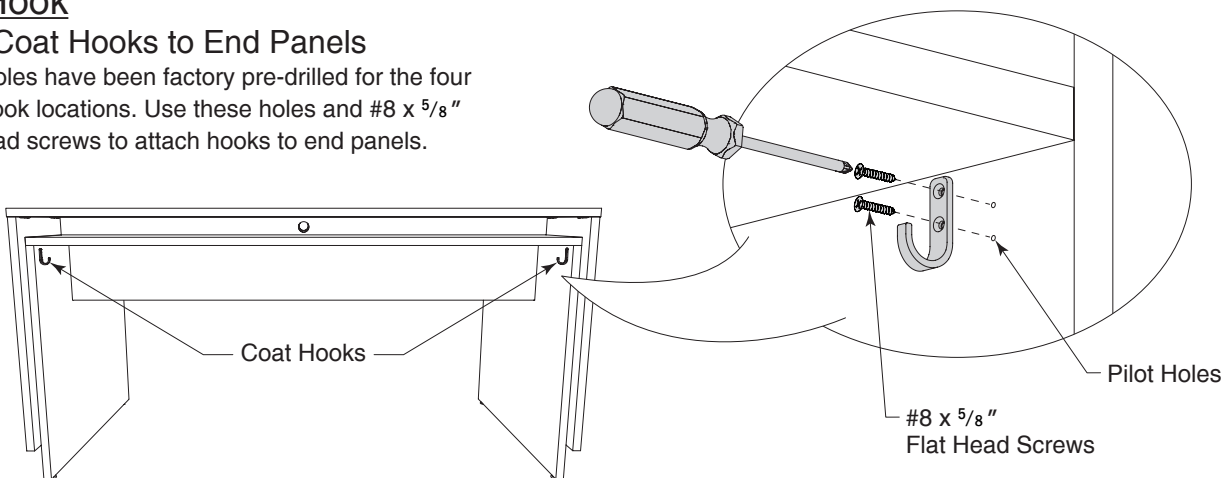

Foot Rail

Attach Foot Rails to End Panels

- Locate holes with threaded inserts towards bottom of end panels.
- Carefully slide foot rails into place between end panels.
Note: Bottom of end panels may need to be pulled out slightly as not to scratch/mar inside surfaces.
- Fasten using 1/4 - 20 x 3/4" Socket Head Cap Screws.

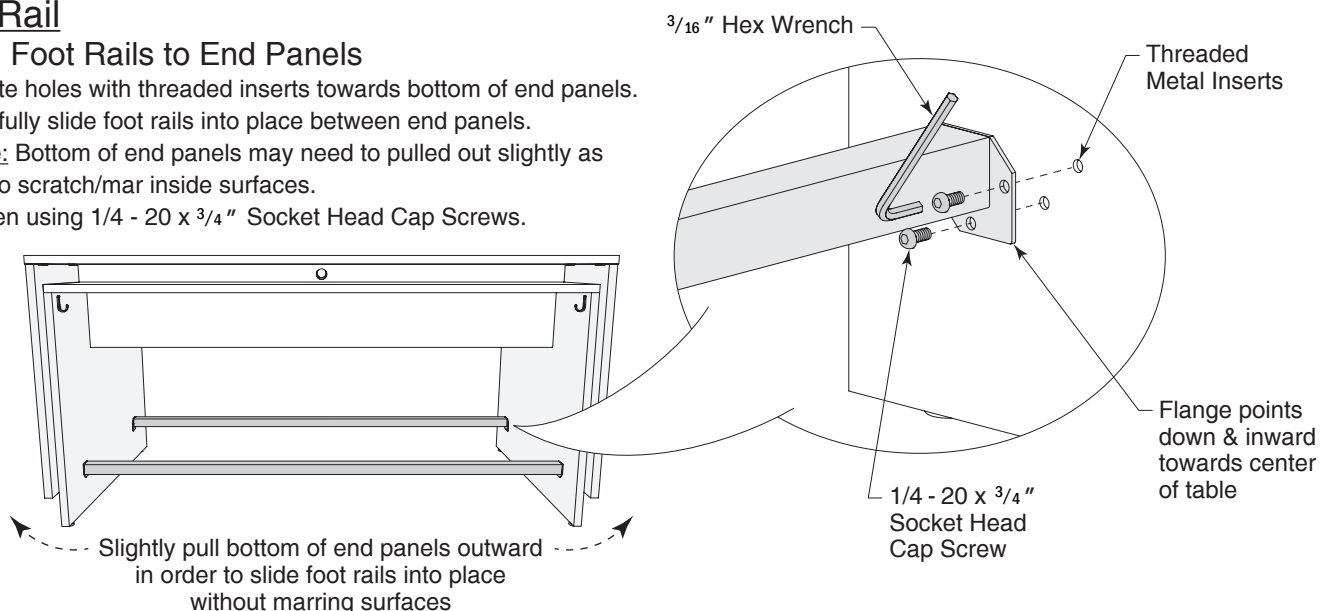

Notice To Installers: Failure to comply with installation instructions will compromise the safety, durability and performance of this product, which may risk injury to the user of this product and/or diminish the product life cycle. Jasper Group assumes no liability in these instances.