



Recommended Tools

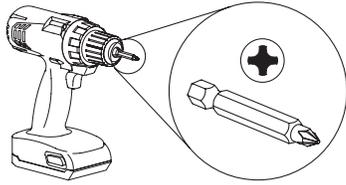


Screw Gun #2 Phillips Head Bit




#2 Phillips Screw Driver

Package Contents

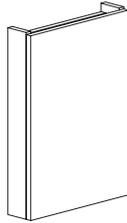


Wire Manager

Hardware Used



#8 x 1 1/2" Pan Head Wood Screws

Vertical Wire Manager

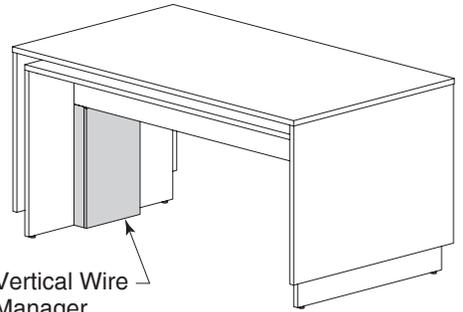


Vertical Wire Manager

Step 1


Attach Wire Manager to Table

- Remove front panel from wire manager frame.
- Center frame to inside of end panel by aligning outside edges of Wire Manager to outside edges of Stretcher Rails.
- Attach using four (4) #8 x 1 1/2" Pan Head Wood Screws.

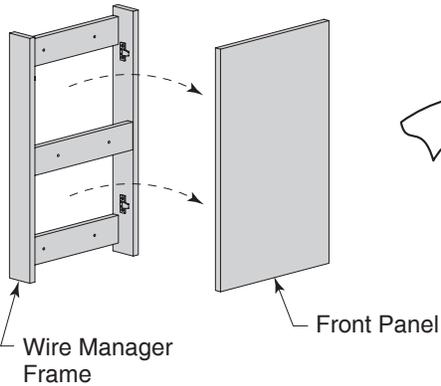

Wire Manager Frame



Front Panel

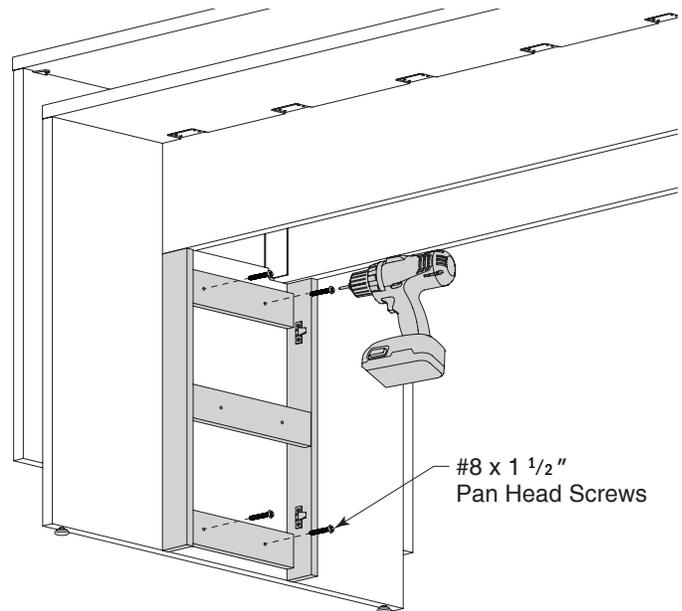

#8 x 1 1/2" Pan Head Screws

Step 2

Reattach Front Panel

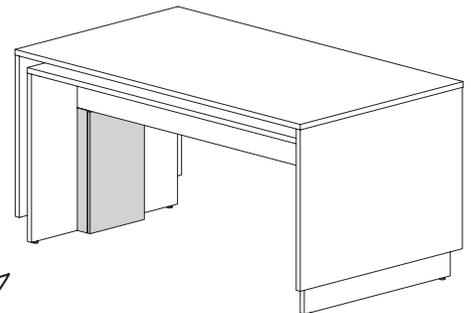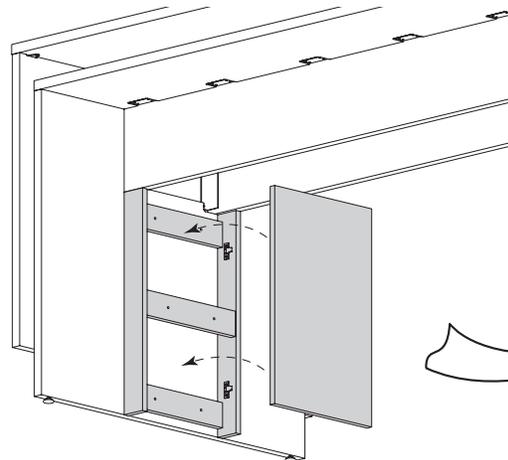

**Notice To Installers:** Failure to comply with installation instructions will compromise the safety, durability and performance of this product, which may risk injury to the user of this product and/or diminish the product life cycle. Jasper Group assumes no liability in these instances.