




Recommended Tools

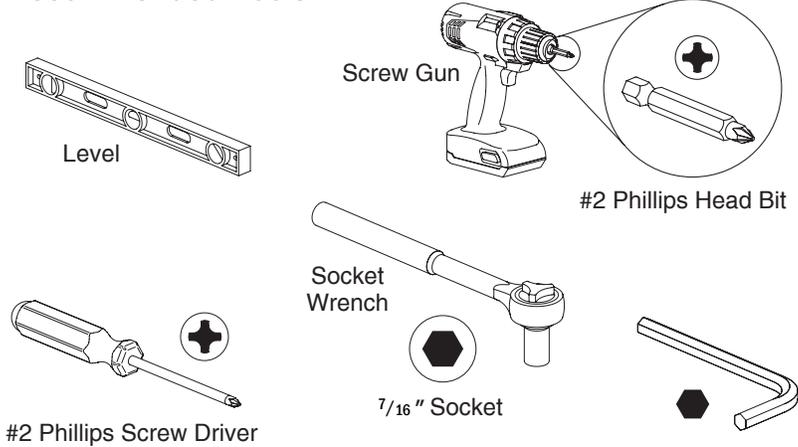


Wall Dependent Layered Table with Bookshelf

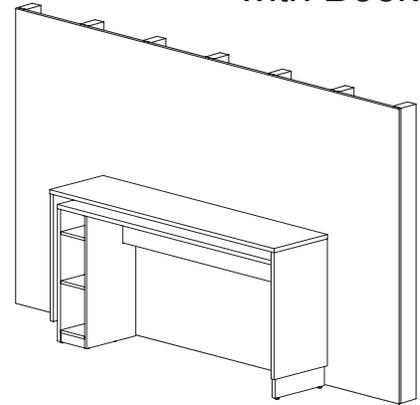

Package Contents

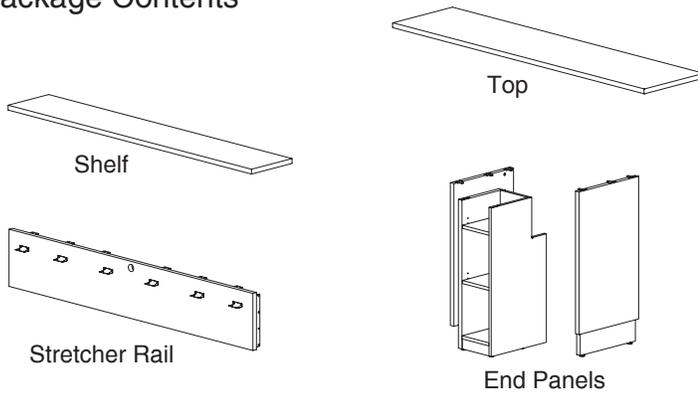

Hardware Used

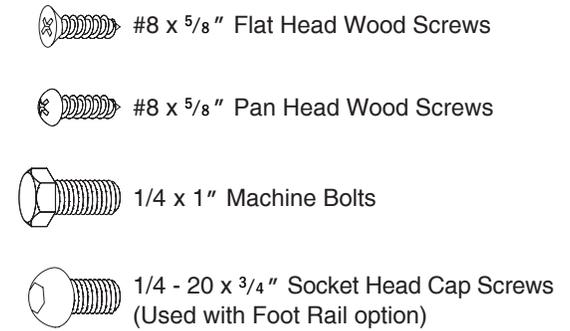


Step 1

Attach Stretcher Rail to End Panels

- Stand End Panels upright and attach Stretcher Rail using 1/4" bolts. Tighten bolts firmly.

Note: Two people are recommended for assembly.

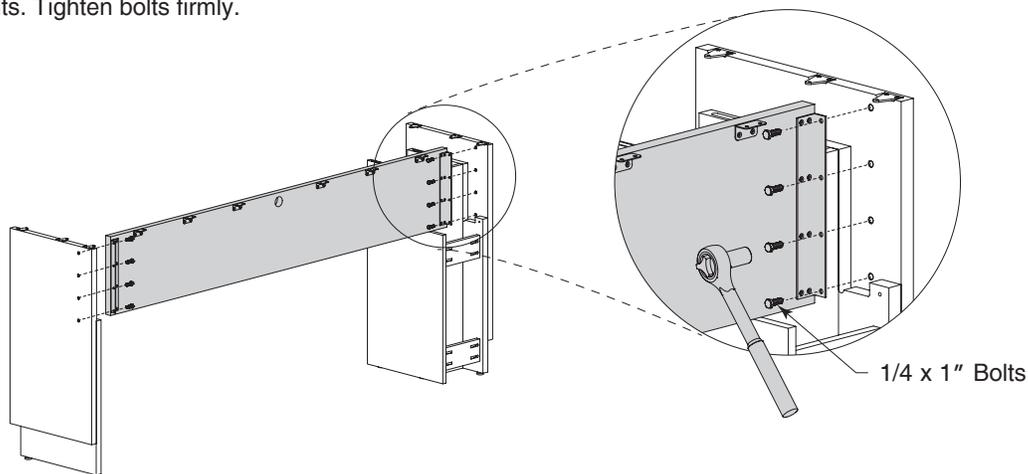


**Notice To Installers:** Failure to comply with installation instructions will compromise the safety, durability and performance of this product, which may risk injury to the user of this product and/or diminish the product life cycle. Jasper Group assumes no liability in these instances.

**Step 2**

**Attach Worksurface to Frame**

- Place worksurface onto frame. Align edges accordingly.
- Fasten top to frame using all under surface brackets. Use #8 x 5/8" flat head screws on triangle brackets and #8 x 5/8" pan head screws on L-brackets.


**Wall Dependent Layered Table with Bookshelf (continued)**

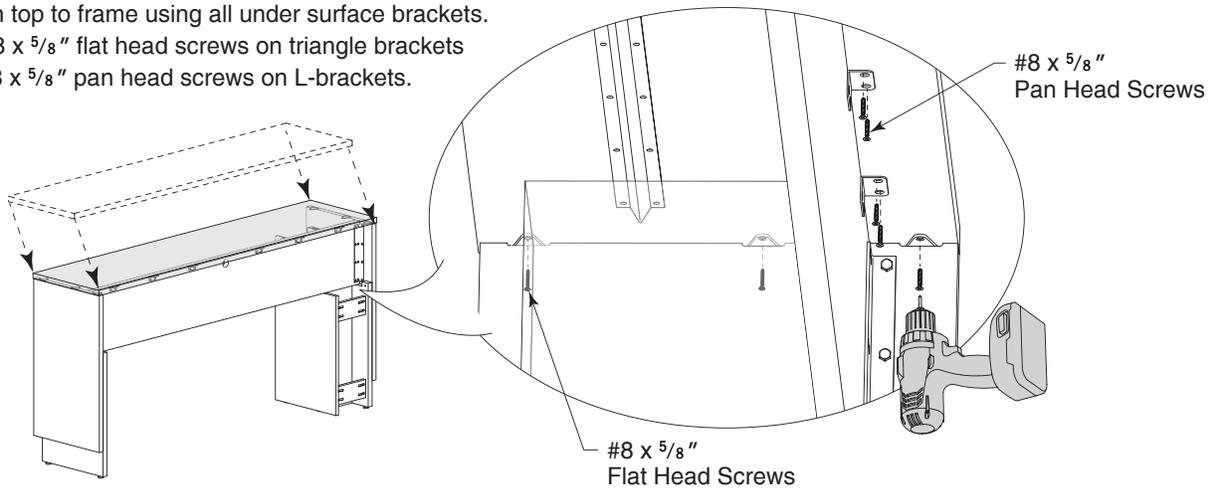

**Step 3**

**Attach Shelf**


- With shoulder bolts facing down and bracket cutouts towards the back, slide shelf into place under worksurface.
- Align shoulder bolts in bottom of shelf into slotted cutouts. Push shelf forward to engage shoulder bolts into Mod-eez brackets.
- Fasten shelf to L-brackets using #8 x 5/8" pan head screws.

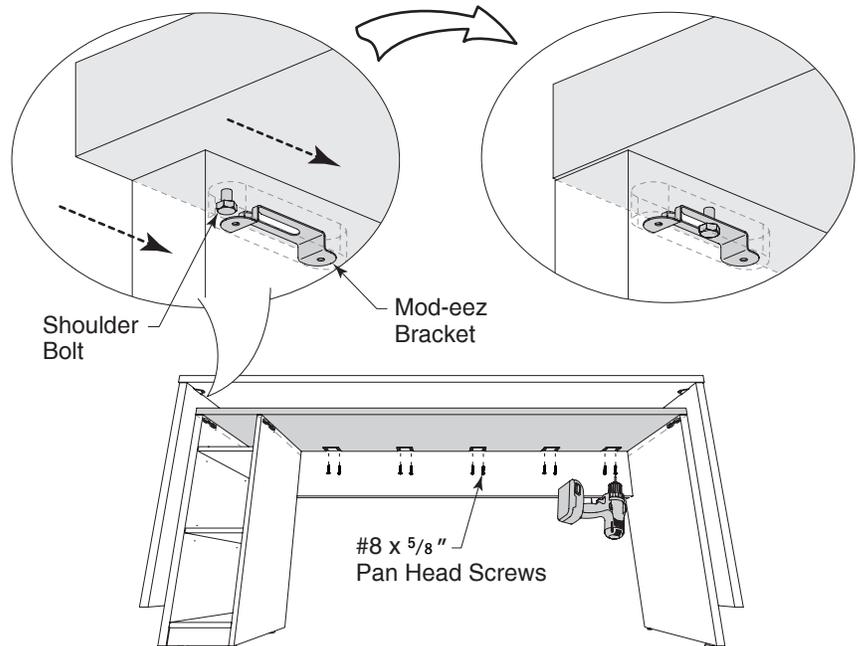

**Step 4**

**Level Table**


- Position table against wall in desired location. Level front-to-back and side-to-side by rotating adjustable glides.

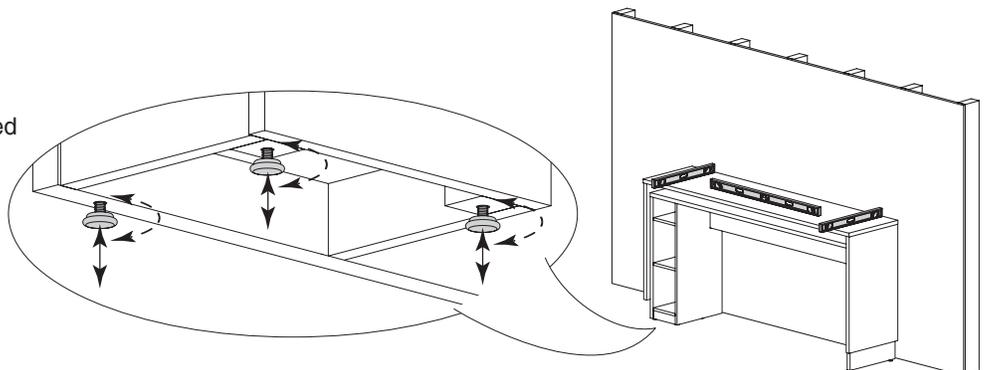


**Notice To Installers:** Failure to comply with installation instructions will compromise the safety, durability and performance of this product, which may risk injury to the user of this product and/or diminish the product life cycle. Jasper Group assumes no liability in these instances.

## Reef

### Table Options





### Wall Dependent Layered Table with Bookshelf (Options)

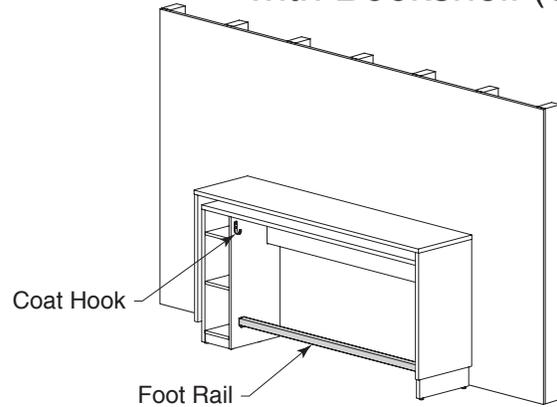

### Coat Hook

#### Attach Coat Hooks to End Panels



- Pilot holes have been factory pre-drilled for the two coat hook locations. Use these holes and #8 x 5/8" flat head screws to attach hooks to end panels.

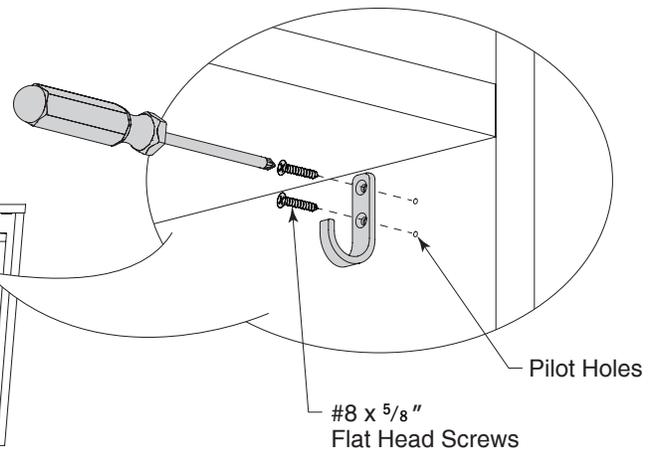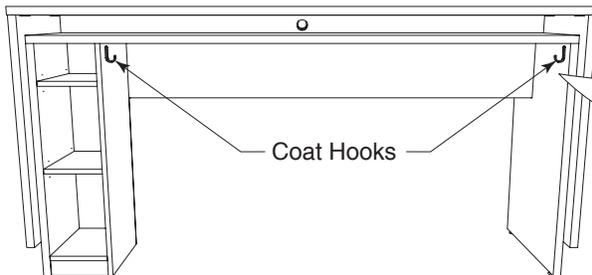

### Foot Rail

#### Attach Foot Rail to End Panels

- Locate foot rail holes towards the bottom of end panels.
- Carefully slide foot rail into place between end panels.  
**Note:** Bottom of end panel may need to be pulled out slightly as not to scratch/mar inside surfaces.
- Fasten using 1/4 - 20 x 3/4" Socket Head Cap Screws.

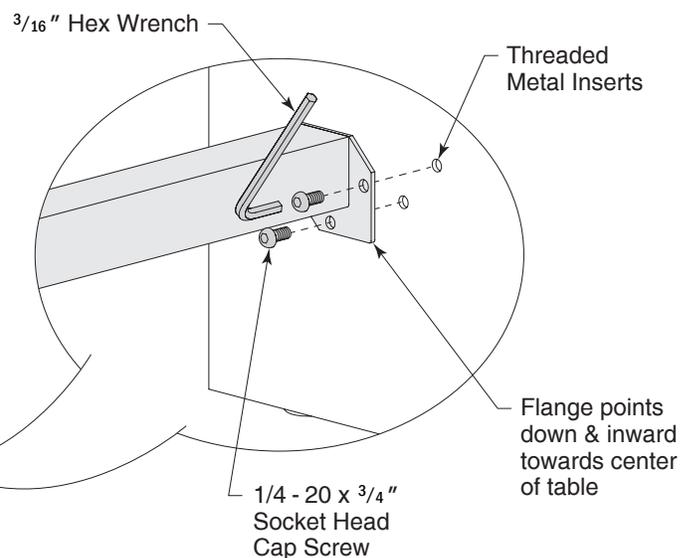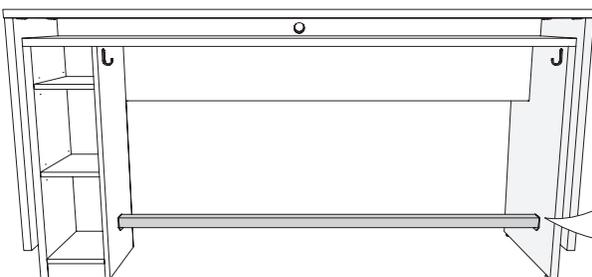

**Notice To Installers:** Failure to comply with installation instructions will compromise the safety, durability and performance of this product, which may risk injury to the user of this product and/or diminish the product life cycle. Jasper Group assumes no liability in these instances.