


# VISION MODULAR

## INSTALLATION OF A STANDARD HEIGHT MODULAR BACKPANEL WITH OPEN DOOR PEDESTALS

### Recommended Tools

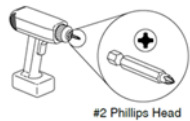

### Hardware Needed



#8 x 1-1/4" FHP Screws

Failure to comply with installation instructions will compromise the safety, durability and performance of this product, which may risk injury to the user of this product and/or diminish the product life cycle. Jasper Group assumes no liability in these instances.


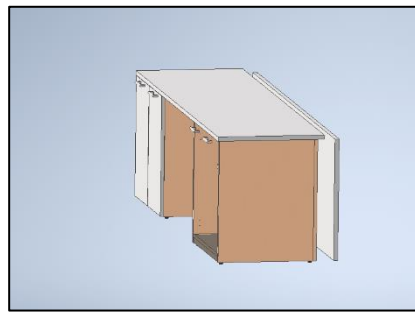


Figure 1

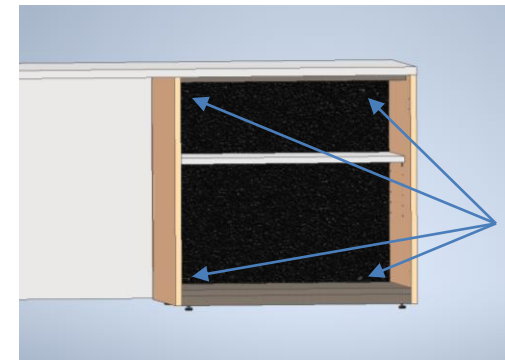

Pre-drilled holes

Figure 2

1. Position the back panel so that it is directly under the top and flush on each side with the pedestals or end panels
2. Secure the back panel by screwing the #8 x 1-1/4" screws provided with the pedestals through the pre-drilled holes in the false back (Figure 2)
3. Repeat steps for both pedestals

