



Recommended Tools



Phillips Screw Driver

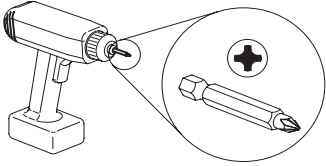


Screw Gun Phillips Head Bits & Drill Bits

Hardware Used





#1/4"-20 X 5/8" Pan Head Bolt

Table Connecting Brackets and Corner Leg

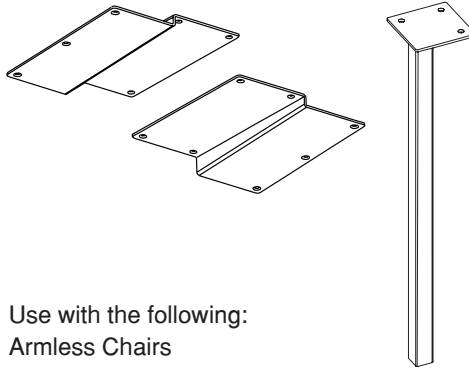

Use with the following:
 Armless Chairs
 Straight Arms Chairs
 Flared Arms Chairs
 Bariatric Chairs
 Typical Multiple Seating
 Modular Multiple Seating

not recommended for stools and chairs with casters

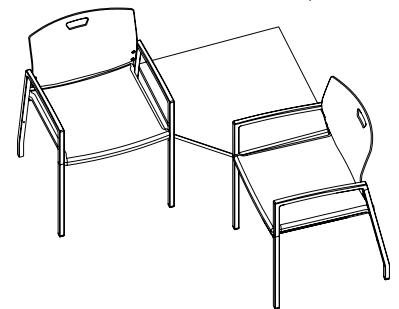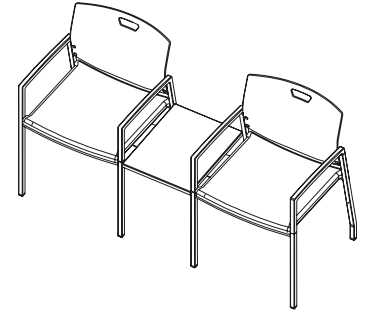

Step 1

preparing the frame

- carefully remove the round bumpers from the chair frame on bottom side of the seat rail

Step 2

attaching the connect bracket onto the chair

- align the brackets with the three holes on bottom side of the rails, note the reference the right bracket with the right side and left bracket with the left, handiness is determined by a the seated position see diagram 2
- attached with the provided machine bolts

diagram 1



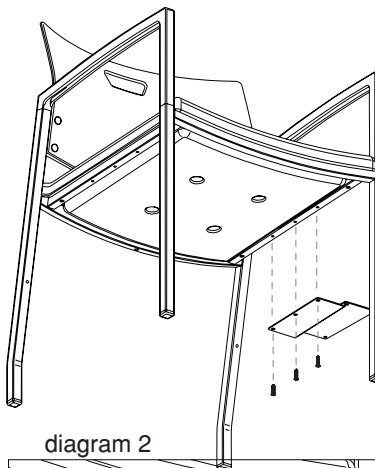


diagram 2

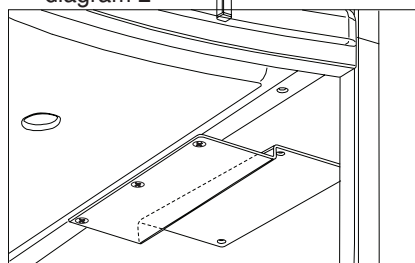

insert bracket
 mount on left side
 (seated position)

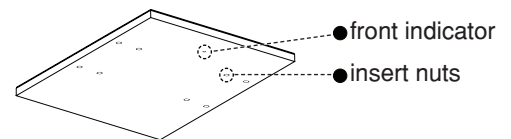

● front indicator
 ● insert nuts


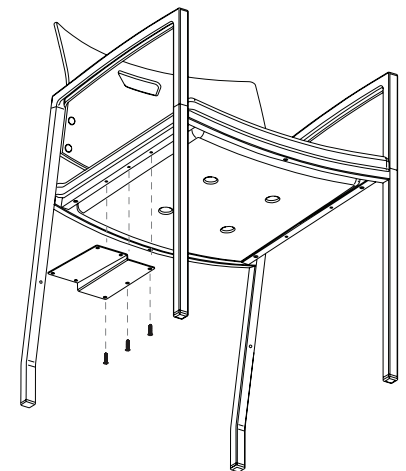


diagram 3

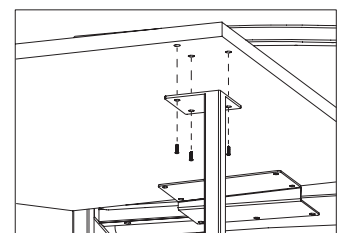

Step 3

attaching the connecting table

- locate the front indicator hole
- align the insert nuts on the top with the holes in the bracket and fasten the top with the provided machine bolts

Step 4 (corner tables)

attaching the back the leg

- align the flat plate with insert holes on the top and fasten the top with provided machine bolts see diagram 3

Notice To Installers: Failure to comply with installation instructions will compromise the safety, durability and performance of this product, which may risk injury to the user of this product and/or diminish the product life cycle. Jasper Group assumes no liability in these instances.