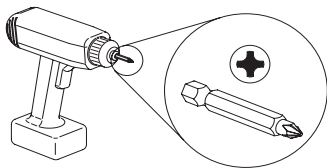



Recommended Tools



Screw Gun

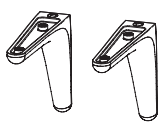
Phillips Head Bits & Drill Bits

Hardware Used

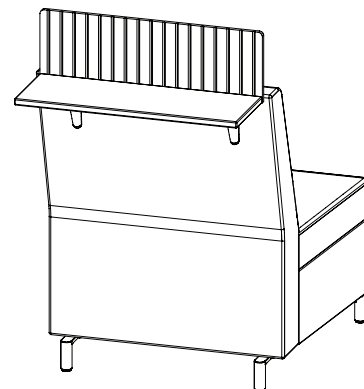
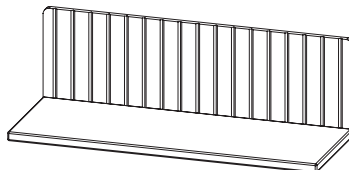
#8 X 1"
pan head wood screws

10-32 x 1/2" screws

Support Brackets

brackets, hardware
and counter shelf
assembly are packed
in boxes within the
chair carton.

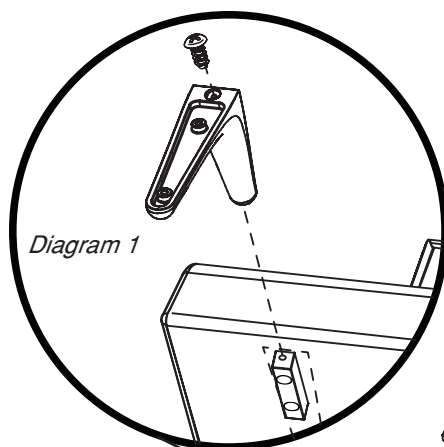
Counter & Screen

**Step 1**

Install the support brackets

- align the shelf support brackets over the support blocks already attached to back of the chair.
- secure the 10-32 x 1/2" thru the shelf support brackets into the support blocks.

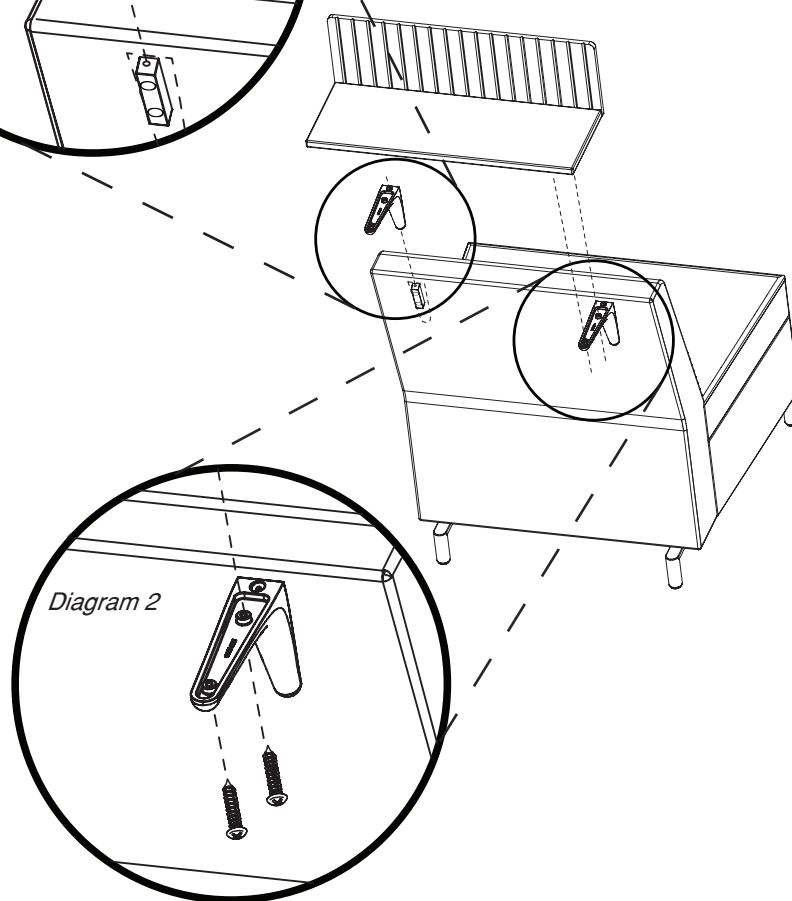
See Diagram 1

**Step 2**

Attaching the counter shelf

- align the counter shelf assembly with equal spacing on each side of the back. Push counter shelf assembly toward the back until snug.
- Once aligned secure the counter shelf assembly and the support brackets with #8 x 1" wood screws.

See Diagram 2



Instruction show a single seat with the optional shelf counter, use these same instructions for all models with shelf counter assemblies.

Notice To Installers: Failure to comply with installation instructions will compromise the safety, durability and performance of this product, which may risk injury to the user of this product and/or diminish the product life cycle. Jasper Group assumes no liability in these instances.